

## Differential Pressure switch setting – KKC

Remove the top cover on the switch and screw down the adjusting screw to it's end.

Turn OFF the compressor MCB

Start the pump and adjust the flow to the design rate of the unit.

Screw the adjusting screw up until the pump contactor trips off, then back in ¼ turn.

Power off the unit and back on to re-set the trip relay.

Check the pump runs (if it trips wind the screw down another ¼ turn & repeat until it runs).

When the pump is running OK slow the flow down to 60% of it's design and check the switch operates correctly.